




SNOWSHOE / SANDSHOE TIPS

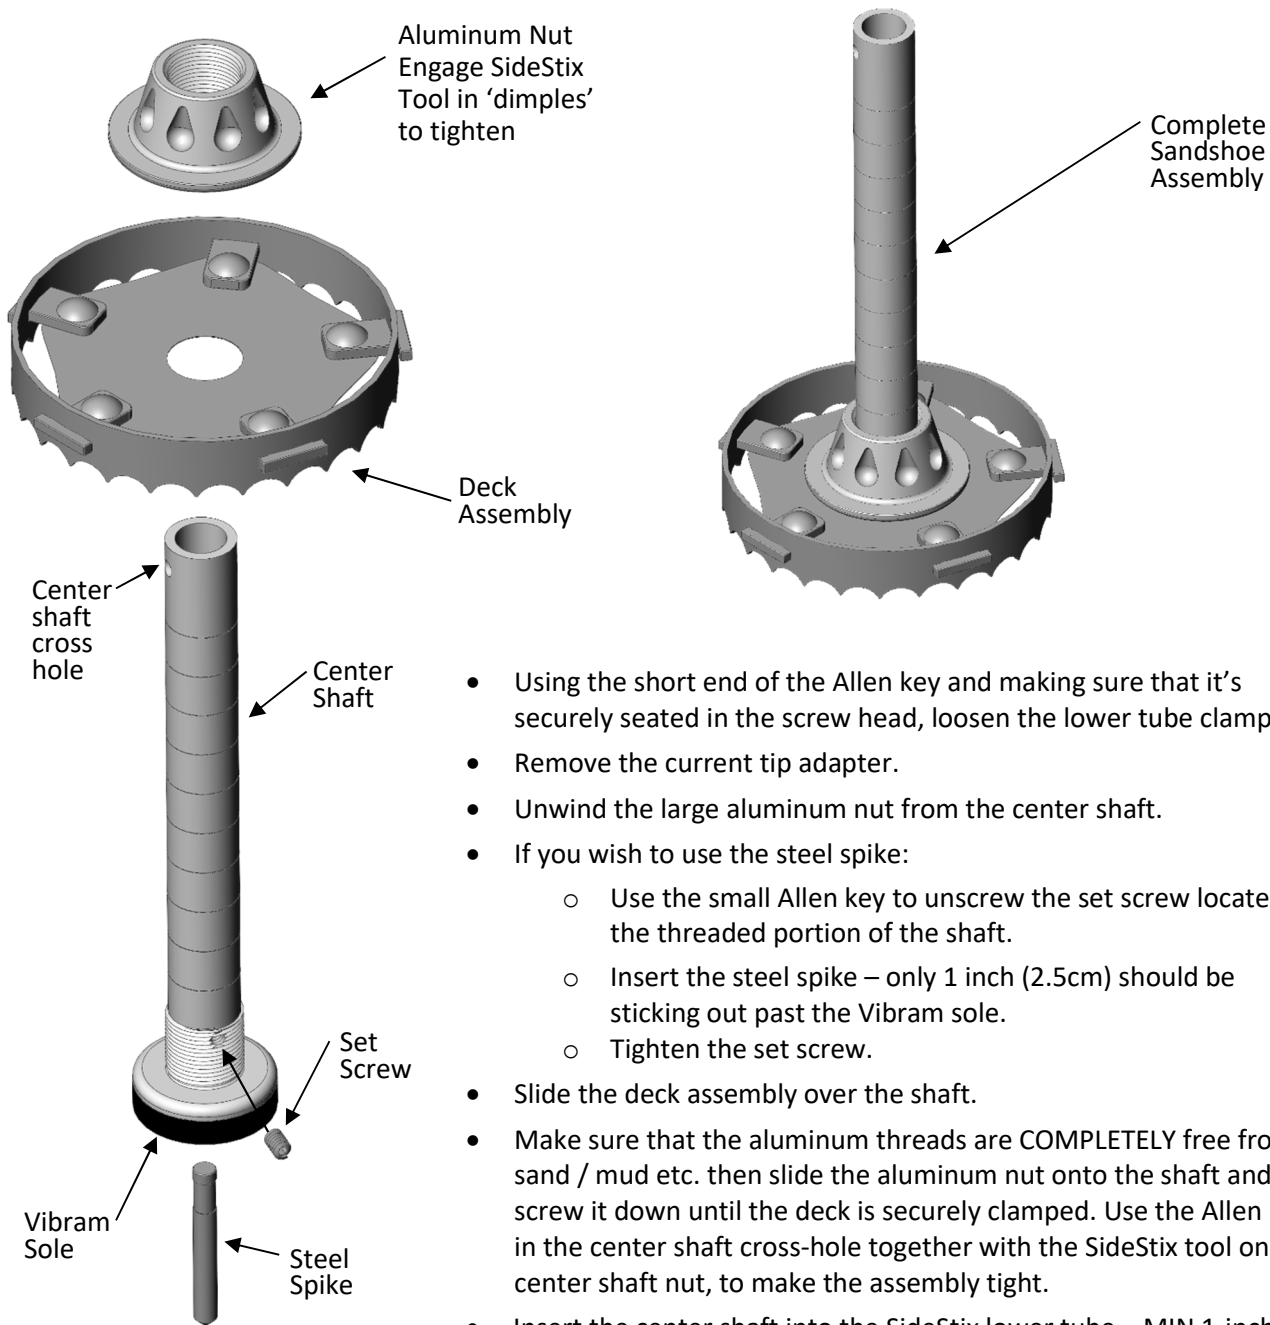

- Using the short end of the Allen key and making sure that it's securely seated in the screw head, loosen the lower tube clamp.
- Remove the current tip adapter.
- Unwind the large aluminum nut from the center shaft.
- If you wish to use the steel spike:
 - Use the small Allen key to unscrew the set screw located in the threaded portion of the shaft.
 - Insert the steel spike – only 1 inch (2.5cm) should be sticking out past the Vibram sole.
 - Tighten the set screw.
- Slide the deck assembly over the shaft.
- Make sure that the aluminum threads are COMPLETELY free from sand / mud etc. then slide the aluminum nut onto the shaft and screw it down until the deck is securely clamped. Use the Allen key in the center shaft cross-hole together with the SideStix tool on the center shaft nut, to make the assembly tight.
- Insert the center shaft into the SideStix lower tube – MIN 1-inch (2.5cm) embedment and tighten the clamp to 9NM.

Note: At least 1 inch (2 ½ cm) should be embedded in the lower tube at all times.

Video Tutorial at:
<https://www.sidestix.com/tutorials/>

